

Bonnet and Poppet Installation Instructions

1. Remove old Bonnet and Poppet.
2. Clean any debris from inside the back-flow device.
3. Check threads on the back-flow device for any damage.
4. Install Poppet, making sure spring is in place.
5. Screw Bonnet and Poppet, making sure not to cross-thread unit, also make sure O-ring is in place.
6. Use NO "pipe dope" or Teflon tape in the installation of this product.


NUT



BELL COVER




BONNET

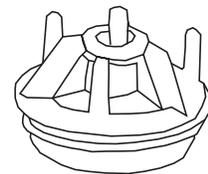


(look for spring here)



POPPET

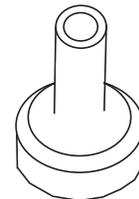

**BACK-FLOW
DEVICE**

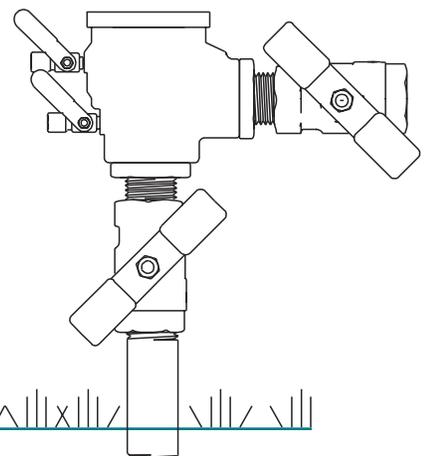

Blue Heron Specialty Products, LLC
250 E-54th Ave. Unit D
Denver, Colorado 80216

Phone: 303-296-2100 • Fax: 303-296-5575

www.blue-heron-products.com • email: btowsley@blueheron.com